



K I T S O U N D

ACTIVE⁺ BLUETOOTH REMOTE


USER MANUAL

Box contents:

- KS Active+ Bluetooth remote
- 3 sets of ear buds (S/M/L)
- Earphones
- USB charge cable
- User manual

Functions:

1. Microphone
2. Charging Port
3. Indicator light
4. Previous Button
5. Volume +
6. Function Button/Play/Pause
7. Next Button
8. Volume -
9. Headphone Jack
10. Clip

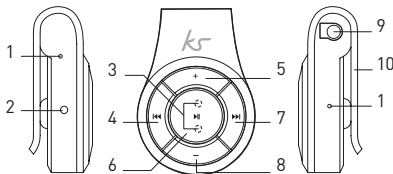

Care for your Active+

Please DON'T

- Get the Active+ wet
- Drop the Active+ as this will invalidate your warranty
- Open up the Active+. There are no user serviceable parts inside
- Expose the Active+ to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO

- Clean the Active+ with a soft dry cloth and no detergents

Initial charging

To charge the Active+, simply: Connect the circular end of the USB charger into the Charging Port (2) on the Active+. Connect the other end of the USB charger into your PC/laptop/Mac. The Indicator Light (3) will glow red. 3 hours later, the Indicator Light (3) will turn blue. Your Active+ will then be fully charged.

Power on

To turn your Active+ on, press and hold the Function Button (6) for 4 seconds until the Indicator Light (3) starts flashing blue. To enter into pairing mode, when the Active+ is turned off, press and hold the Function Button for 5 seconds.

The Indicator Light (3) will flash red and blue alternately. To see how to pair the Active+ with a wireless device, see 'Pairing'.

Power off

Press and hold the Function Button (6) for about 4 seconds. You will see 3 red flashes on the Indicator Light (3) and the Active+ will turn off.

Pairing

After turning on the Active+ and putting it into pairing mode (see 'Power on' for how to do this), the Indicator Light (3) will flash blue and red quickly. The Active+ is now in pairing mode, meaning it is looking for wireless devices to connect to.

When pairing with a mobile phone which supports Bluetooth, ensure that this setting is turned on and that the Active+ is within one metre range. Scan for devices using your device (check your device's user manual if you're unsure of how to do this.)

Select 'KitSound Active+'. When asked for the code, input '0000' then select 'OK'. Once paired with a Bluetooth device, the Indicator Light (3) will flash blue twice every 7 seconds.



Active+ life

When the battery power is running low, you will hear a beep, like the one when turning the Active+ on or off, every 10 seconds until the battery can take no more and the Active+ turns off.

Audio navigation

Play and Pause

In standby mode, press the Play/Pause button (6) to start playing your songs. To pause your current track, quickly press the Play/Pause button (6) and press the Play/Pause button (6) once more to start your music playing again.

Previous track

To go back a track, press and hold the Previous Button (4) for 2 seconds

Next track

If you wish to navigate to the next track, simply press the Next Button (7)

Adjust the volume

To change the volume of your calls or music, simply press Volume + (5) or Volume – (8) to adjust the volume to a suitable level.

Active+ talk

Not only can you hear your music from a range of devices without the bother of wires, you can also use your Active+ to receive phone calls.

Receiving a call

When you hear the sound of ringing in your ears, quickly press the Function Button (6) to answer the call.

End a call

To end a call, simply press the Function Button (6) . If you were playing music before receiving your call, the music will automatically start again.

Redialling

To redial from your paired mobile phone, press and hold the Function Button (6) for 5 seconds to phone the last number that was dialled from your mobile.

Muting the microphone

If you want to mute your microphone, press the Volume+ (5) and Volume – (8) at the same time. To un-mute your microphone, press the Volume + (5) and Volume – (8) again.

Reject a call*

If you're listening to music and don't want to be disturbed by an incoming call, simply press and hold the Function Button (6) for 5 seconds.

Voice dialling*

When music is not playing, press the Function Button (6) to activate voice dialling.

*This function may not be available on all mobile phones.

Warnings

Set the volume control in a low position before wearing the headset or headphones. Limit the amount of time you use headsets or headphones at high volume. Turn the volume down if the sound from the headset or headphones prevents you from hearing people speaking to you.

Use of a headset that covers both ears will impair your ability to hear other sounds. Use of such a headset while driving or riding a bike may create a serious hazard to you and/or others. If you use the headset while driving, ensure your attention remains on driving safely.

Observe all signs and instructions that require an electrical device or RF product to be switched off in designated areas, such as petrol stations, hospitals, aircraft etc.

Keep all products, cords and cables away from operating machinery. This product is not a toy – never allow children to play with the product as small parts may be a choking hazard. Do not force ear tips or ear buds down the ear canal. Do not wear the headset while sleeping or in other situations where pressure may be exerted against the headset.

If your product has an embedded, non-replaceable battery, do not attempt to open the product or remove the battery as this may cause injury and damage the product. Please contact the local recycling facility for removal of the battery. The embedded, non-replaceable battery is designed to last the lifetime of the product.

JB. 2636 / Made in China © KitSound™ 2013
Christchurch, Dorset. BH23 4FL

All trademarks are acknowledged as the property of their respective owners. Unless otherwise stated their use does not imply that the trademark owner is affiliated with Kondor or endorses the products herein.

Please recycle this packaging responsibly.